


CRAZY BOUNCER VENDOR INSTRUCTION MANUL

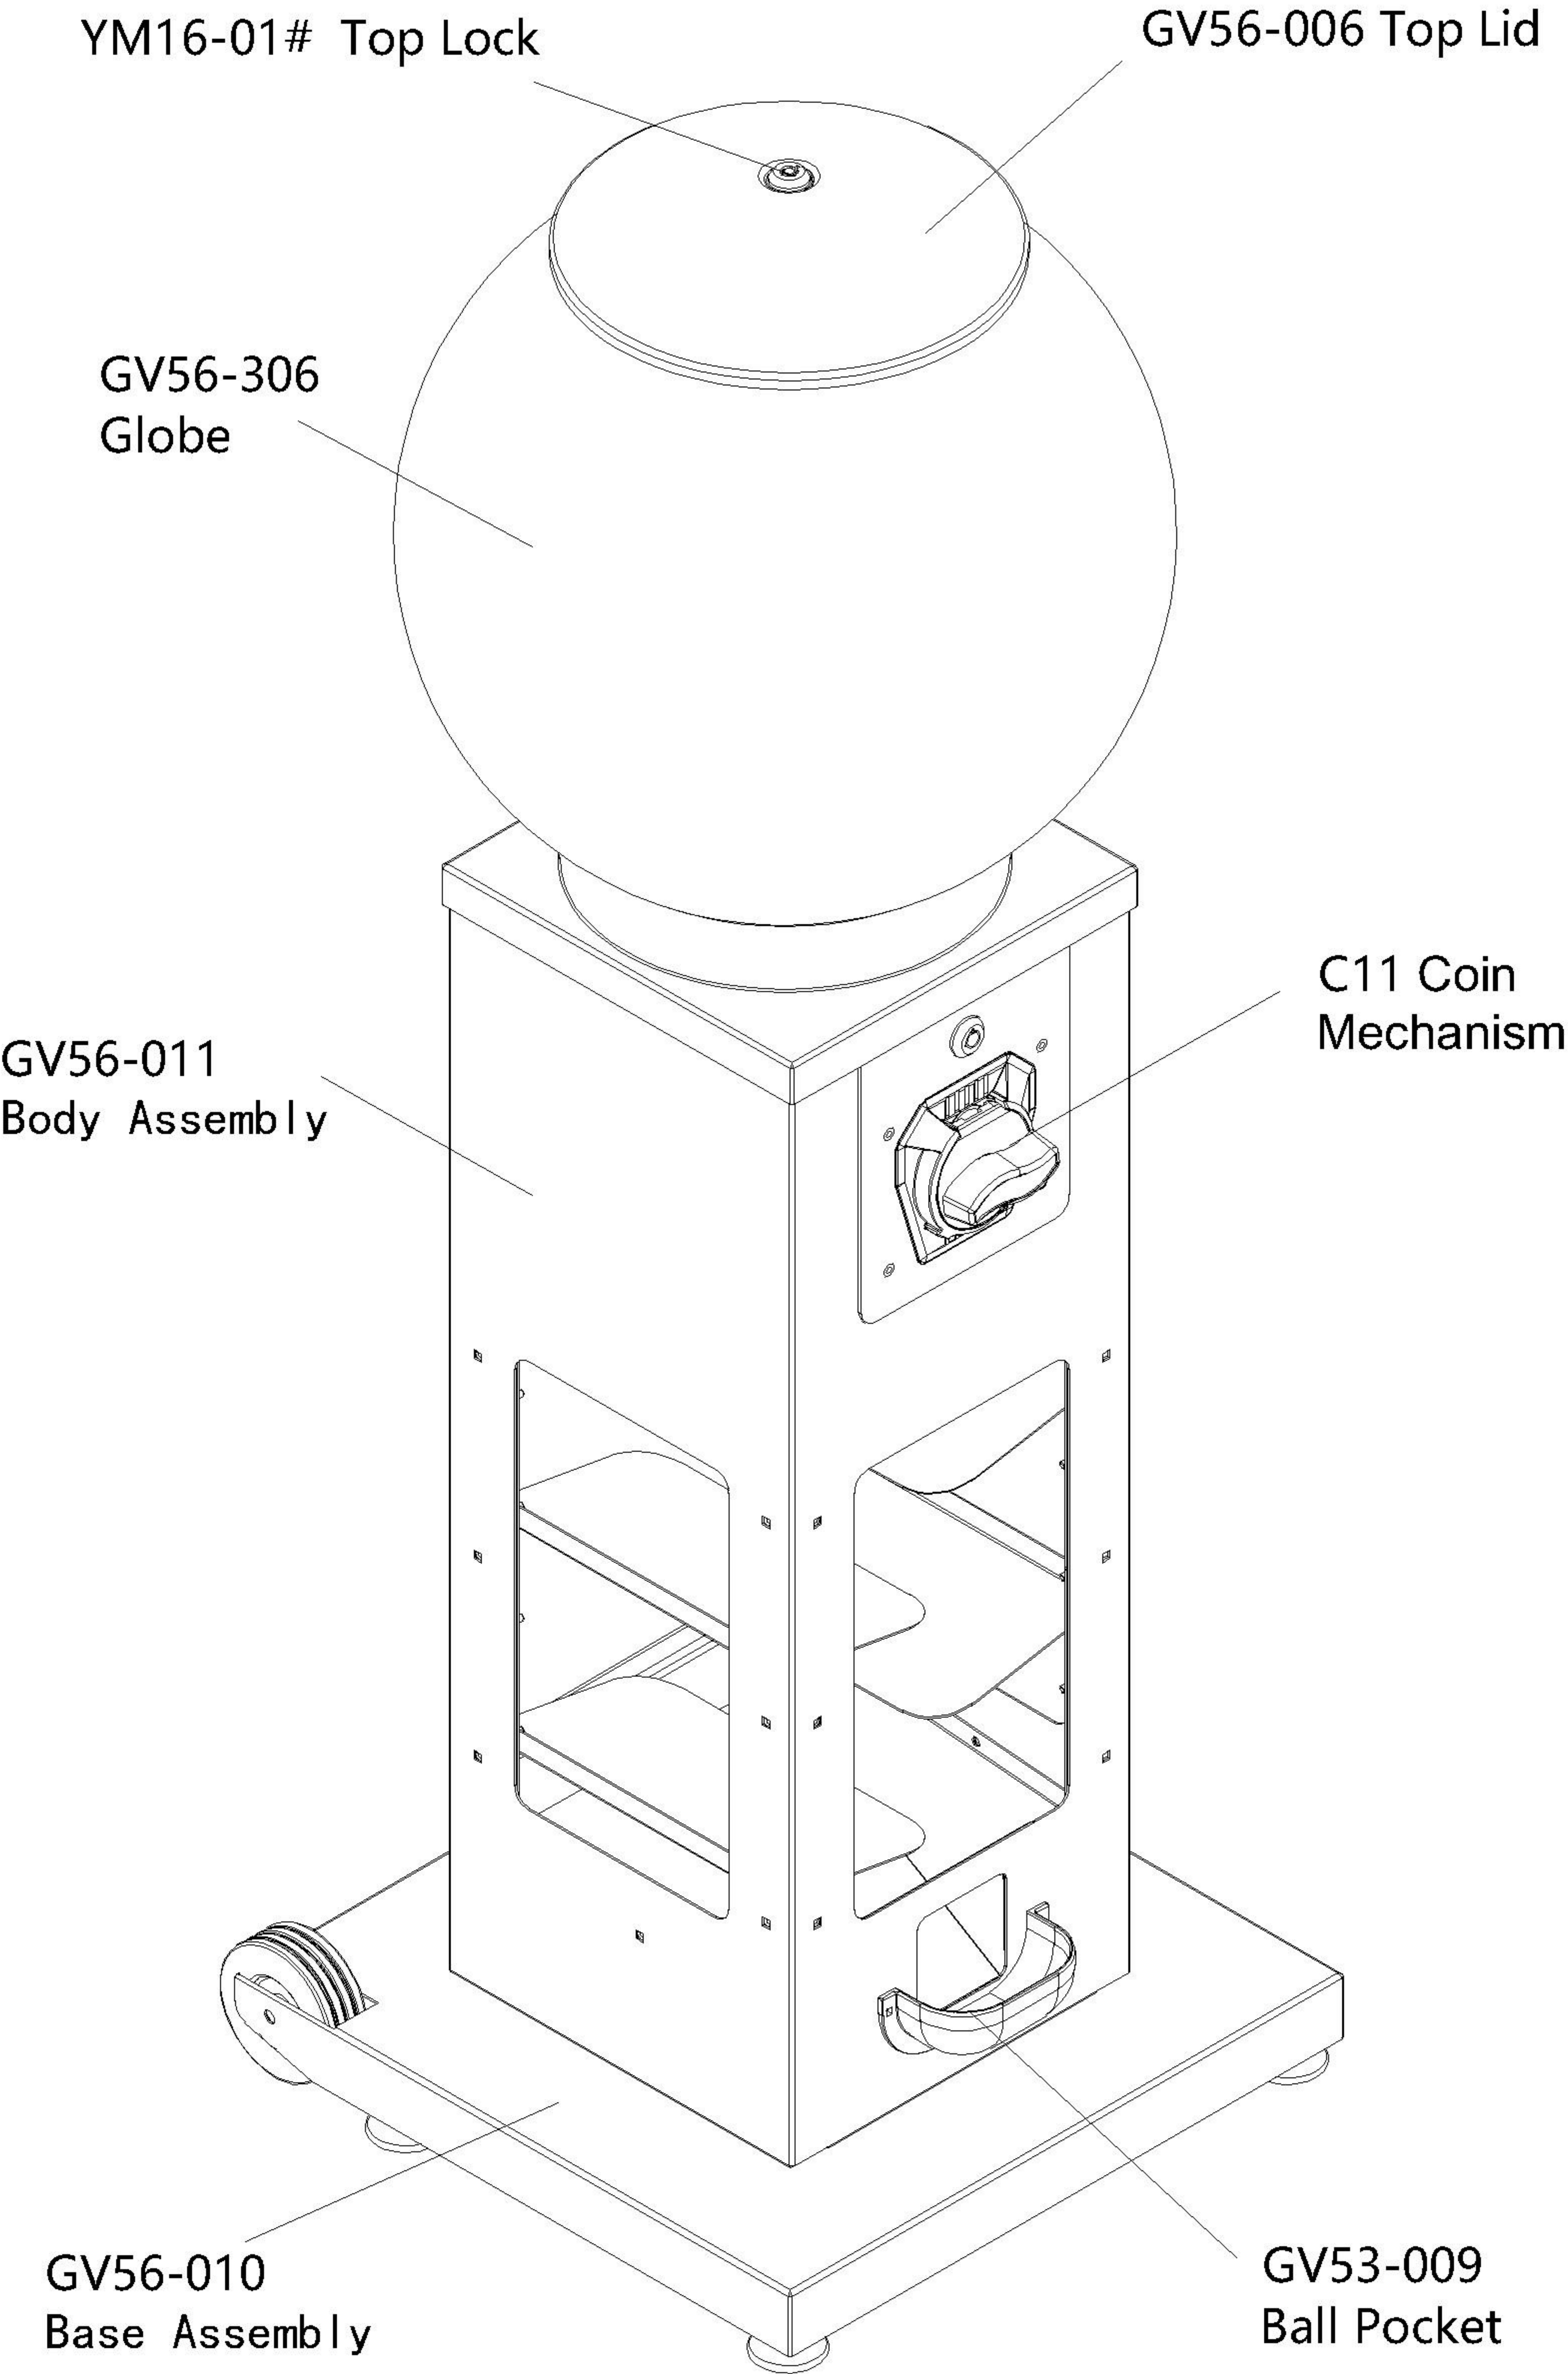

Basic Operation

1. Add the capsule toys or bounceball:

- A.) Unlock and remove the top lid (figure. 1).
- B.) Put the capsule toys, Close the top lid after lock.

2. Retrieve the COINS:

- A.)Unlock and remove the back door (figure. 2).
- B.)Retrieve coin from cash box.
- C.)Replace and tighten Lock.

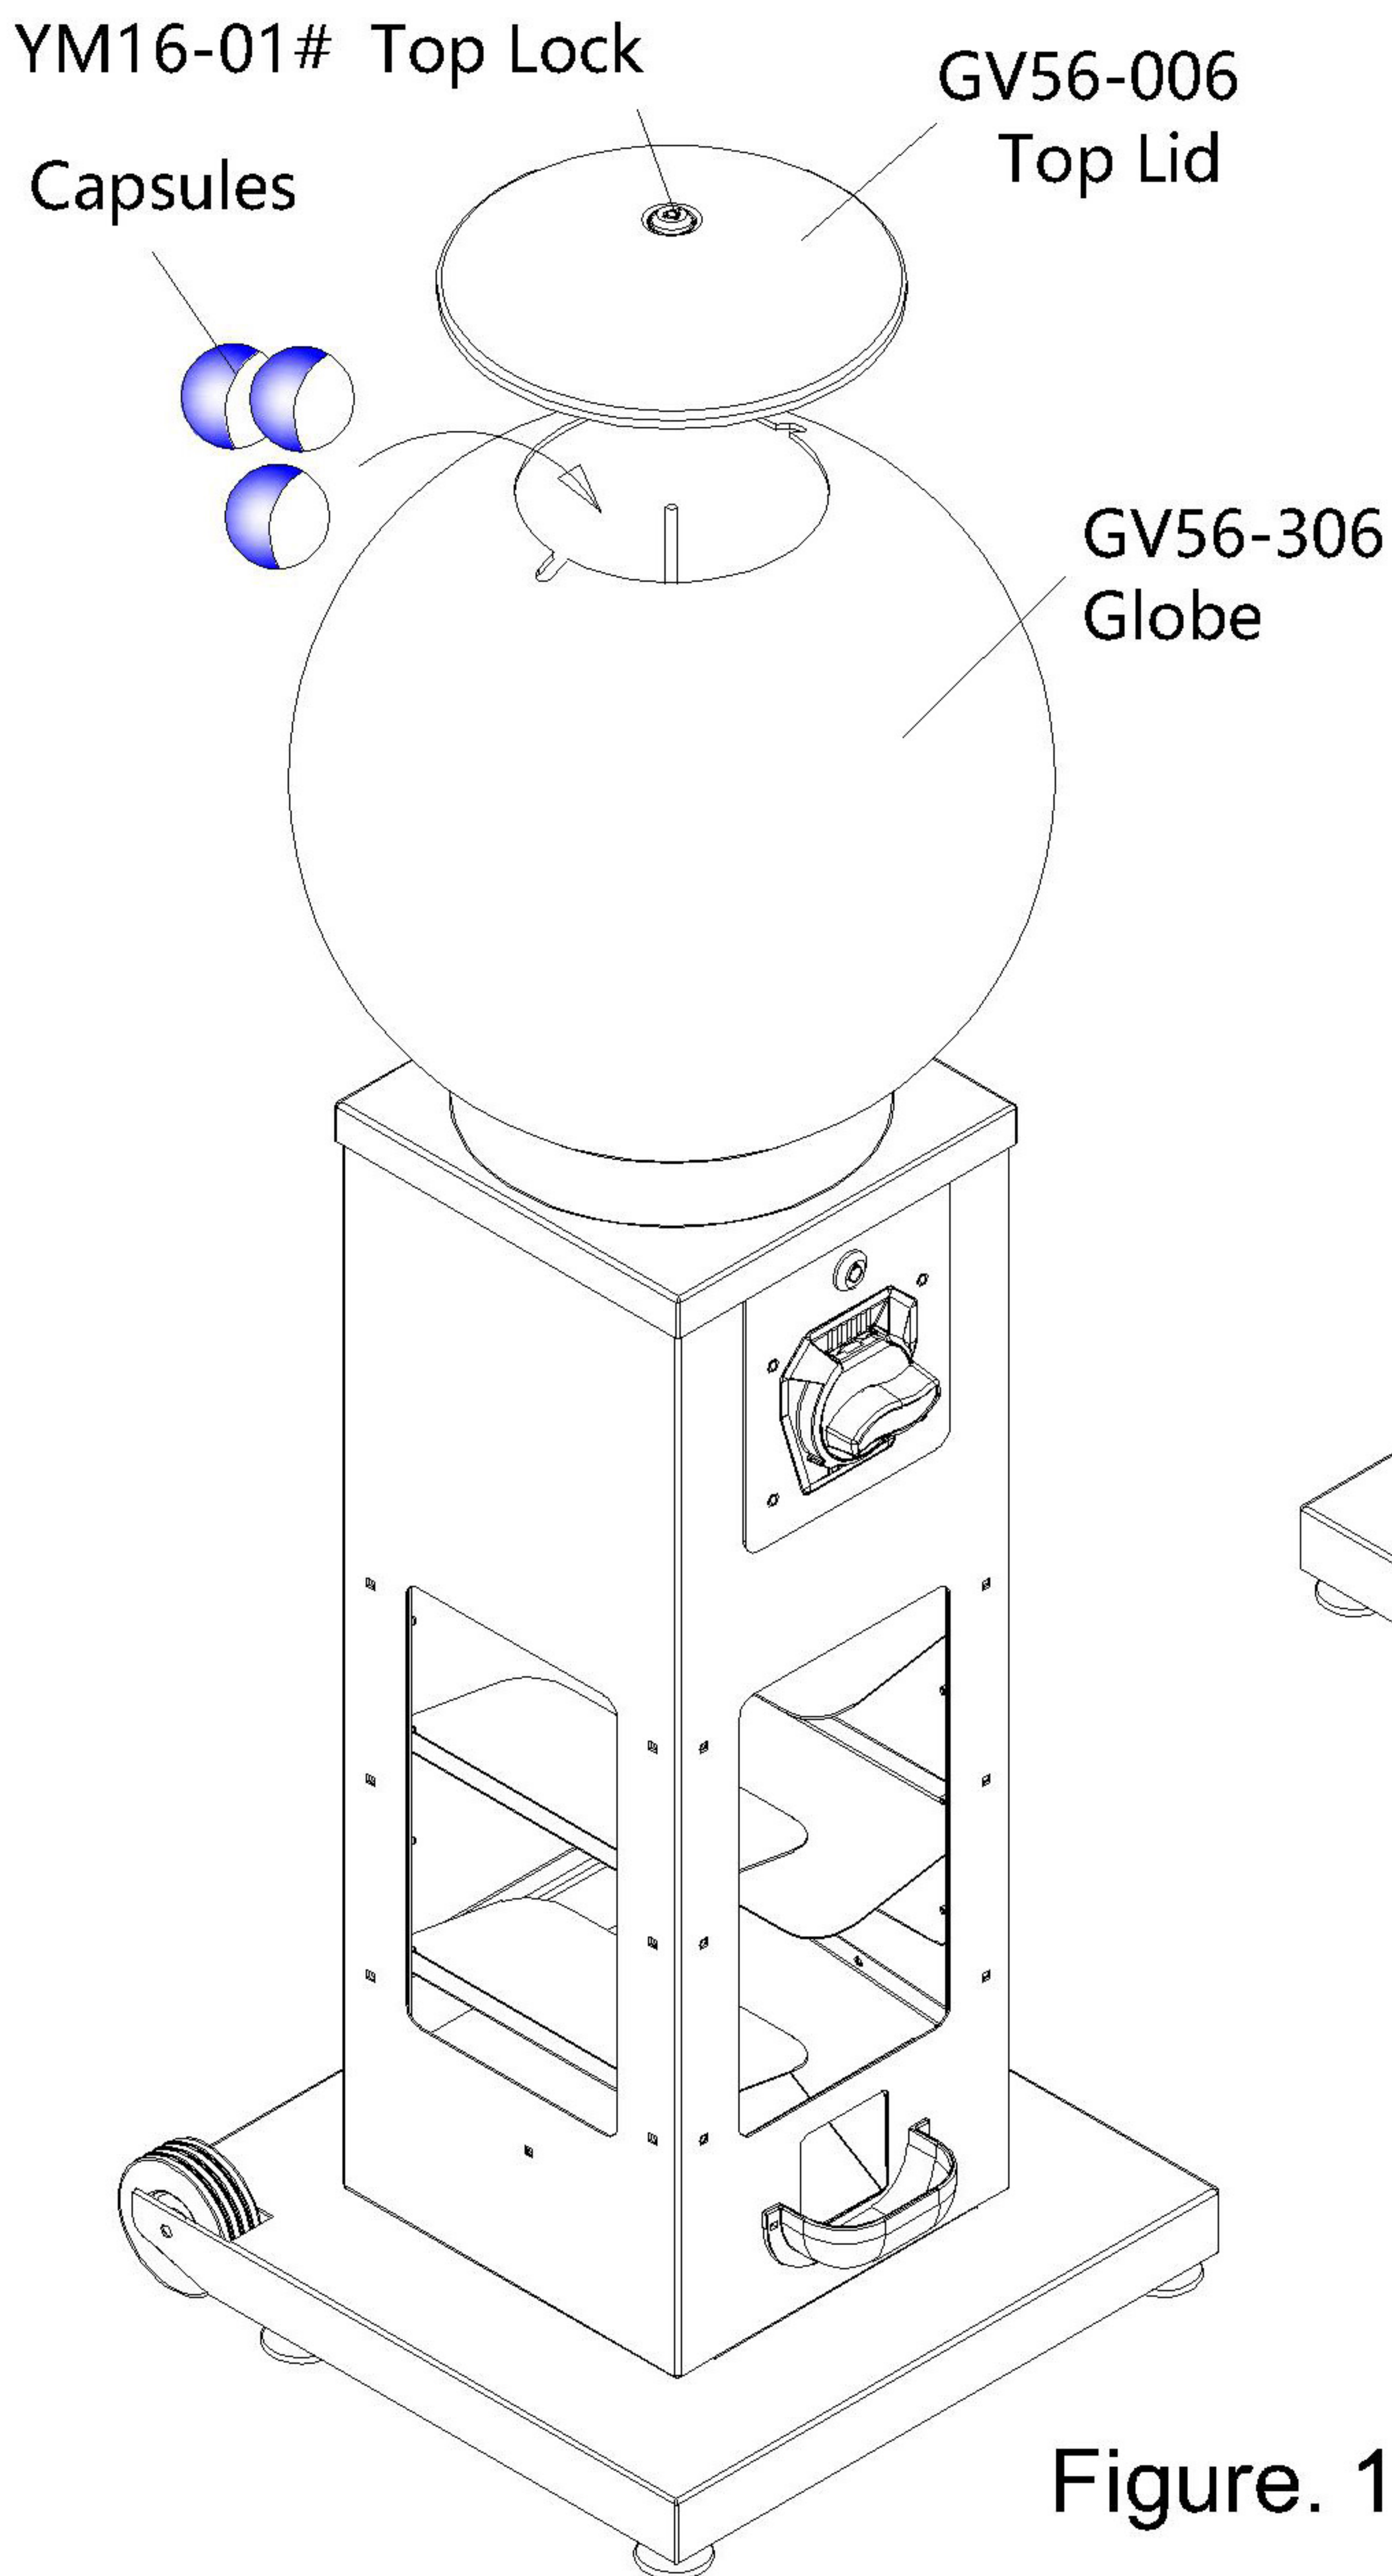


Figure. 1


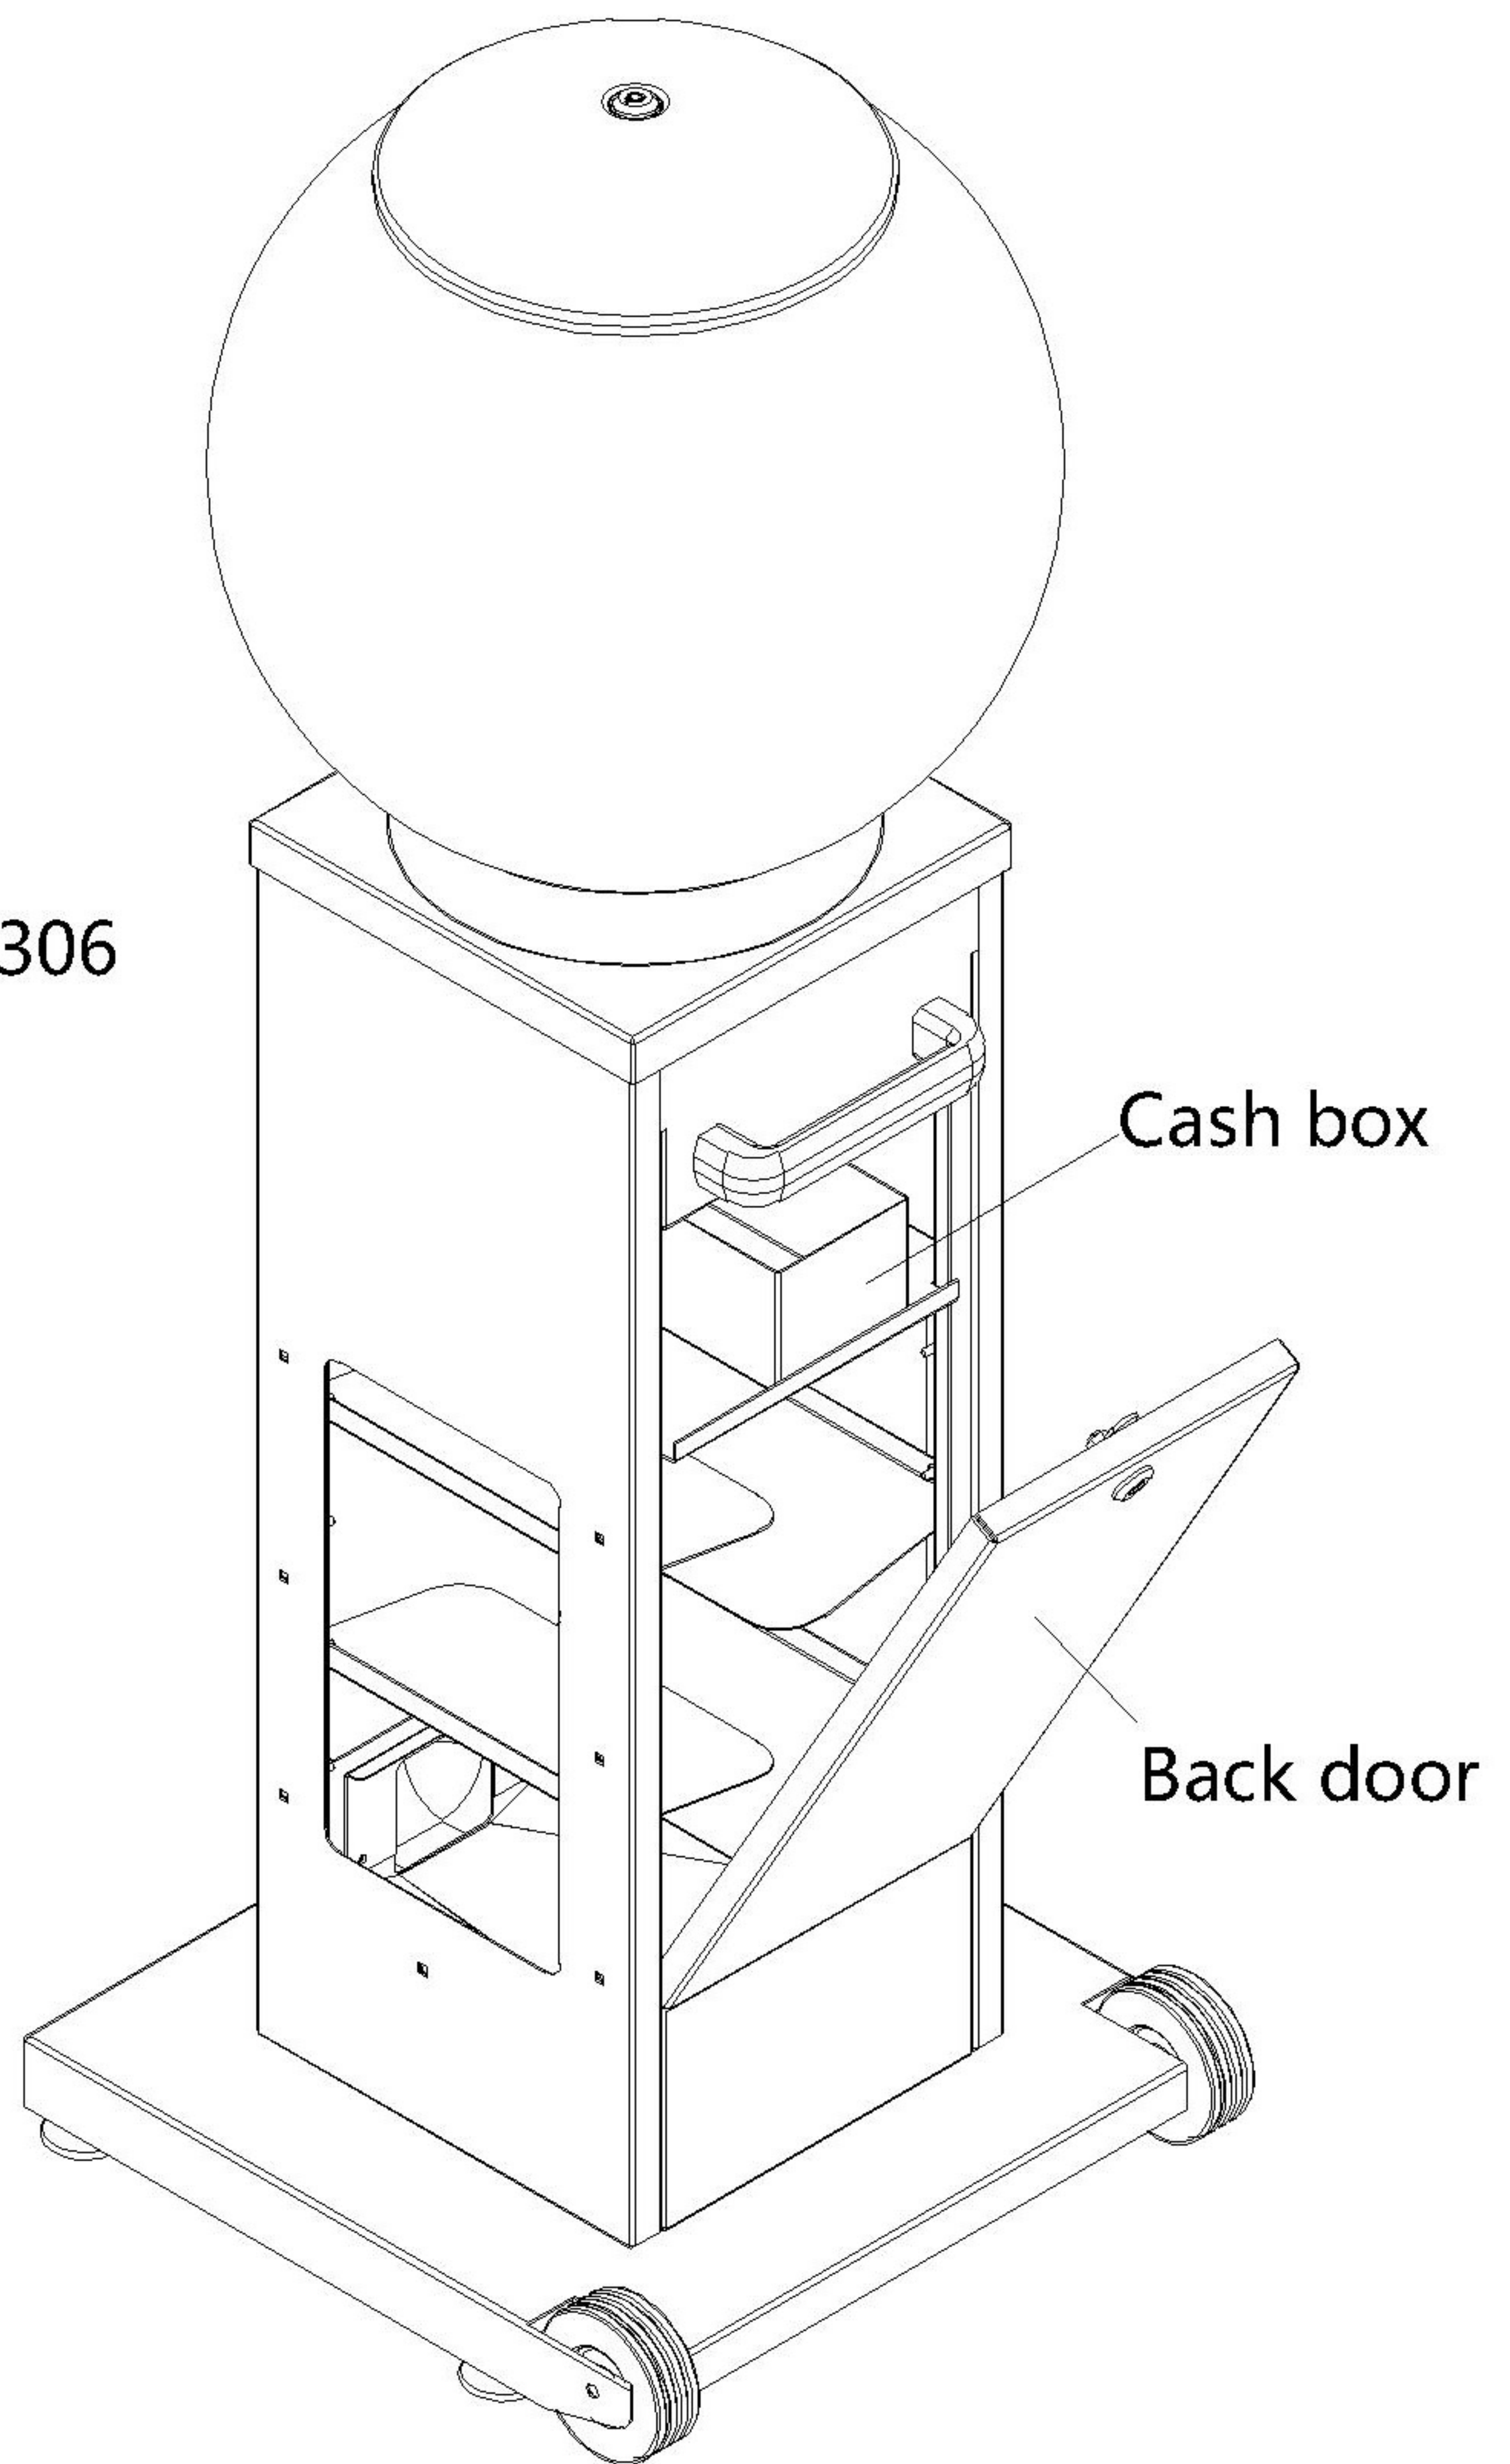


Figure. 2

Basic Operation

3. To change the capsule wheel:
- A.) Unlock and remove the top lid (figure. 3).
 - B.) Unlock and remove the back door.
 - C.) Remove the (2)nuts.
 - D.) Remove the globe assembly.
 - E.) Remove the (3) screws.
 - F.) Remove the bounceball wheel.
 - G.) Replace parts in step A-F in reverse order.

Warning: when using capsule wheel,
Remove the Bounceball baffle.

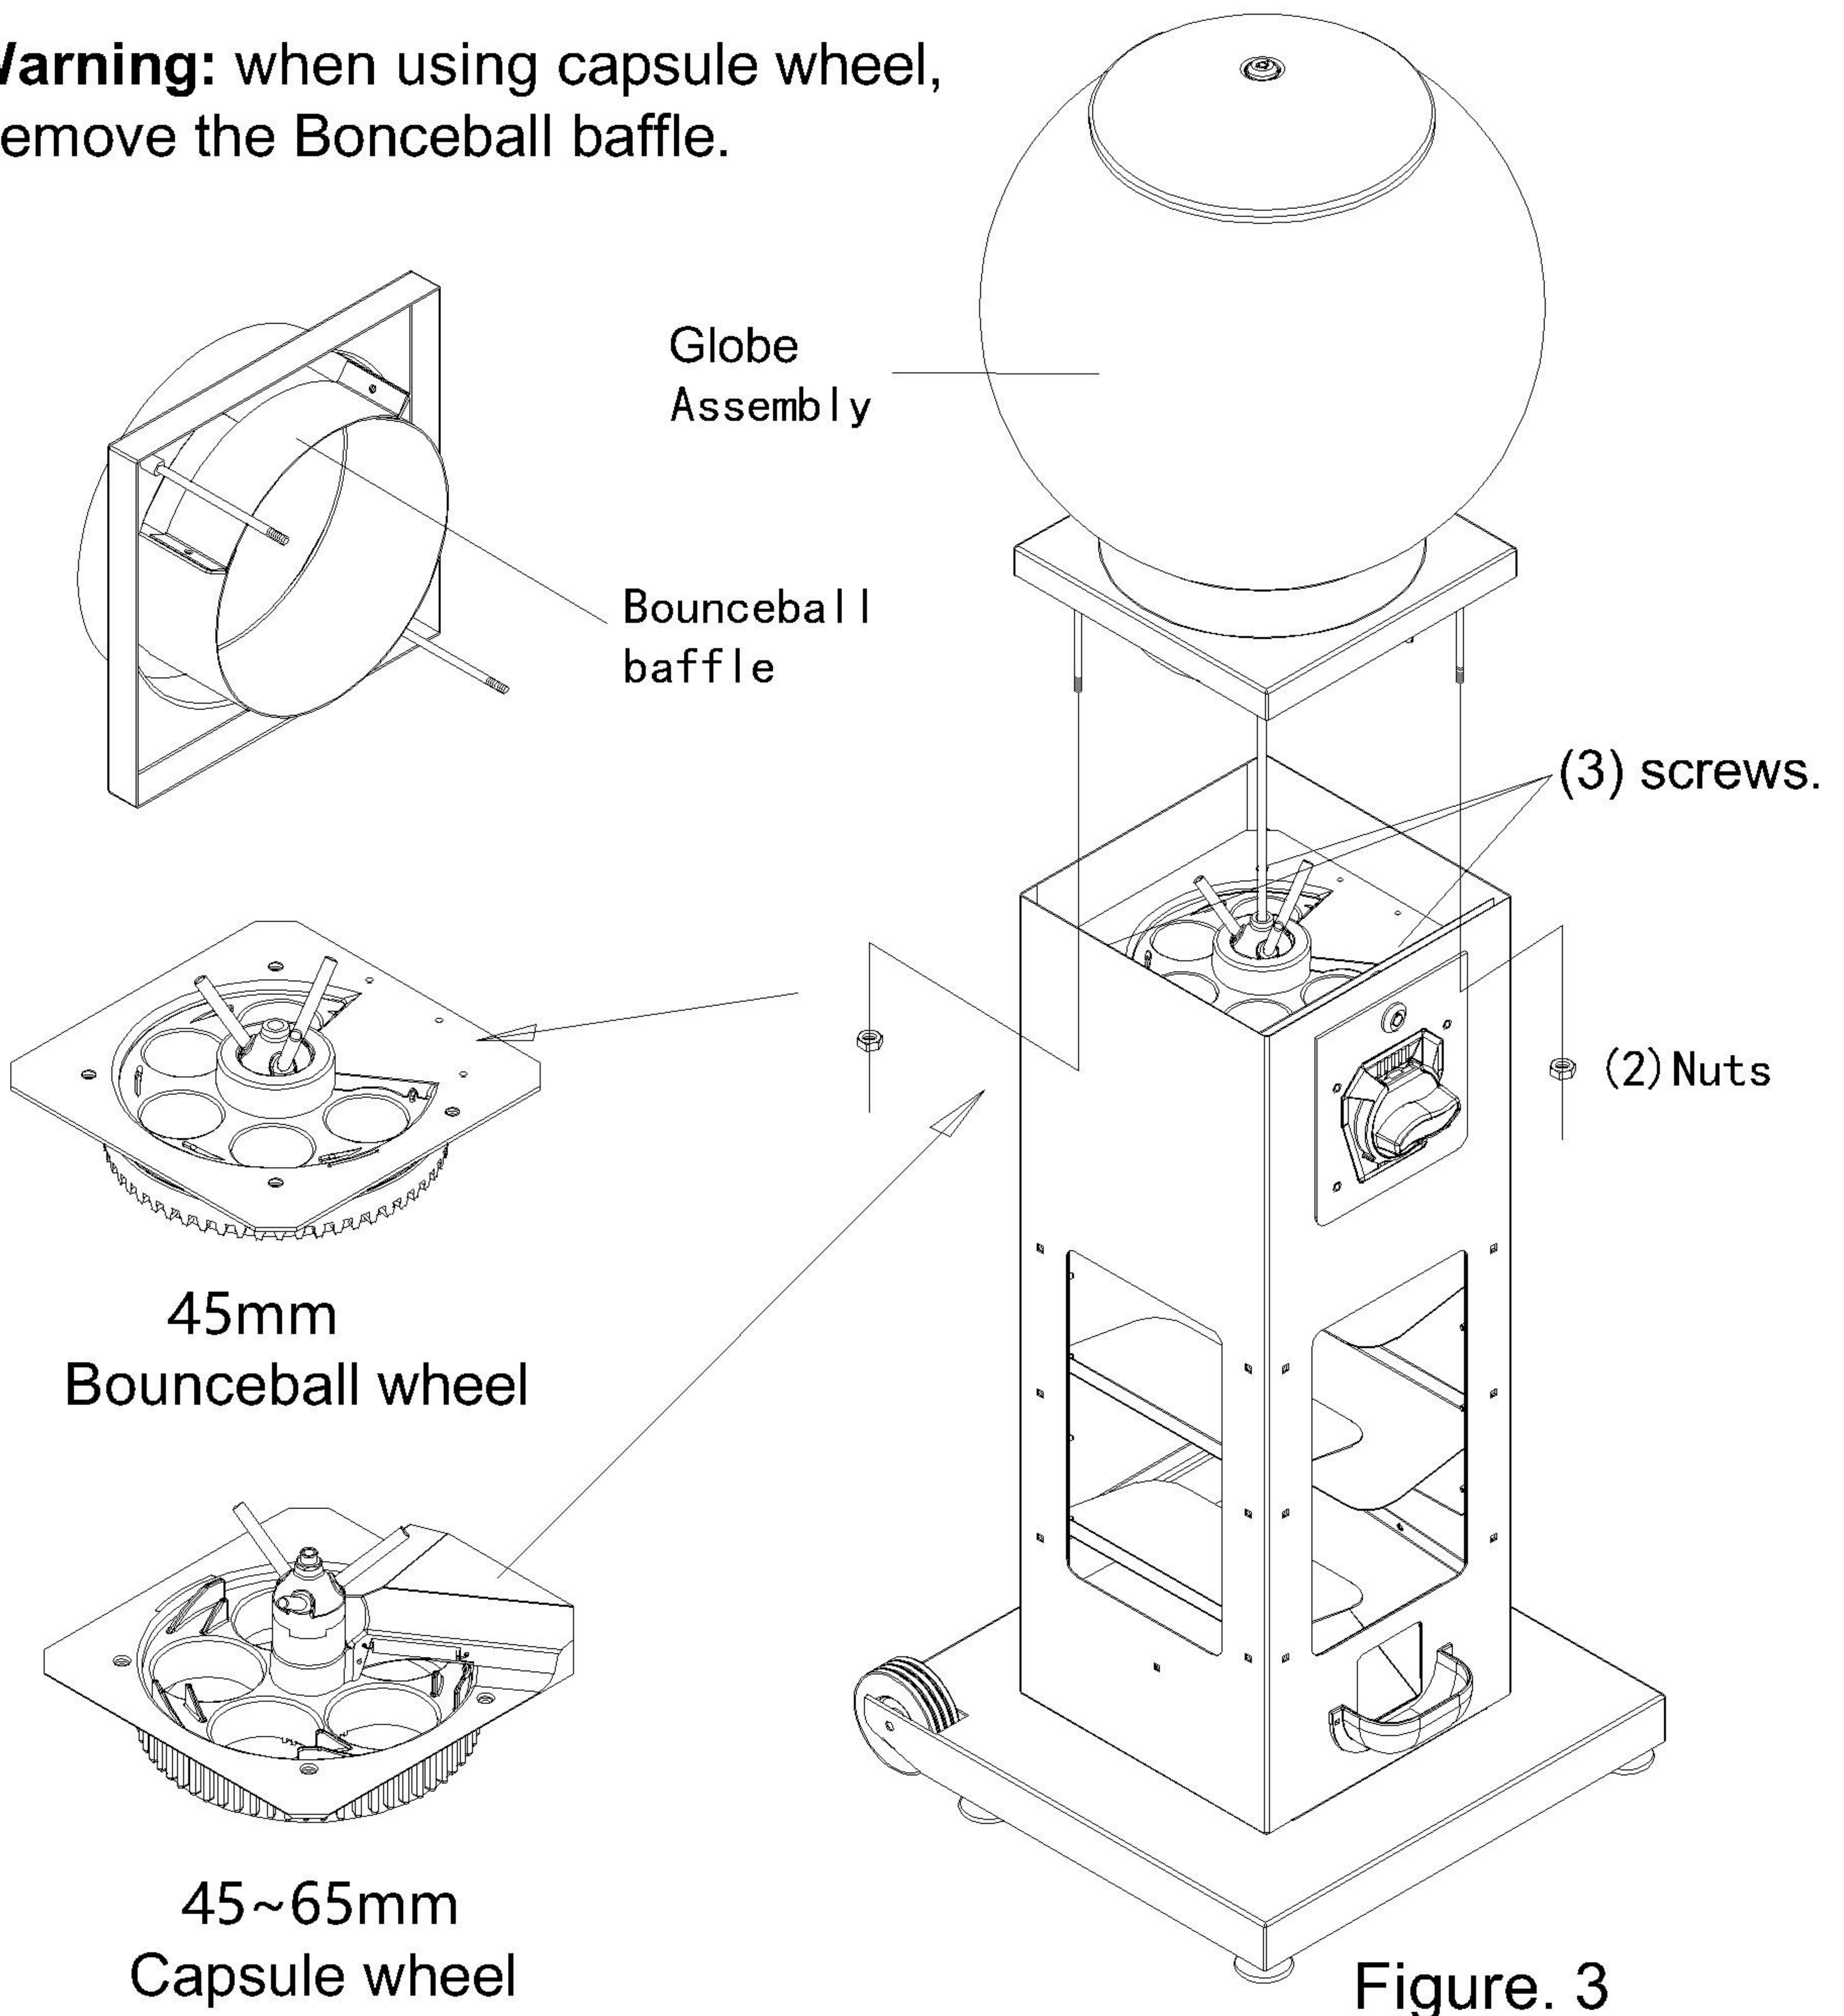

Coin Mechanism

Unlock and open the front plate assembly, Remove front plate assembly, Remove the (4)nuts, Remove the coin mechanism .

1. To dismantle coin mechanism:

- A)Remove center screw(figure. 4).
- B)Remove sprocket.
- C)Remove three(4) mounting screws.
- D)Pull back plate away from face plate.
- E)Remove coin wheel.
- F)Replace parts in step A-F in reverse order.

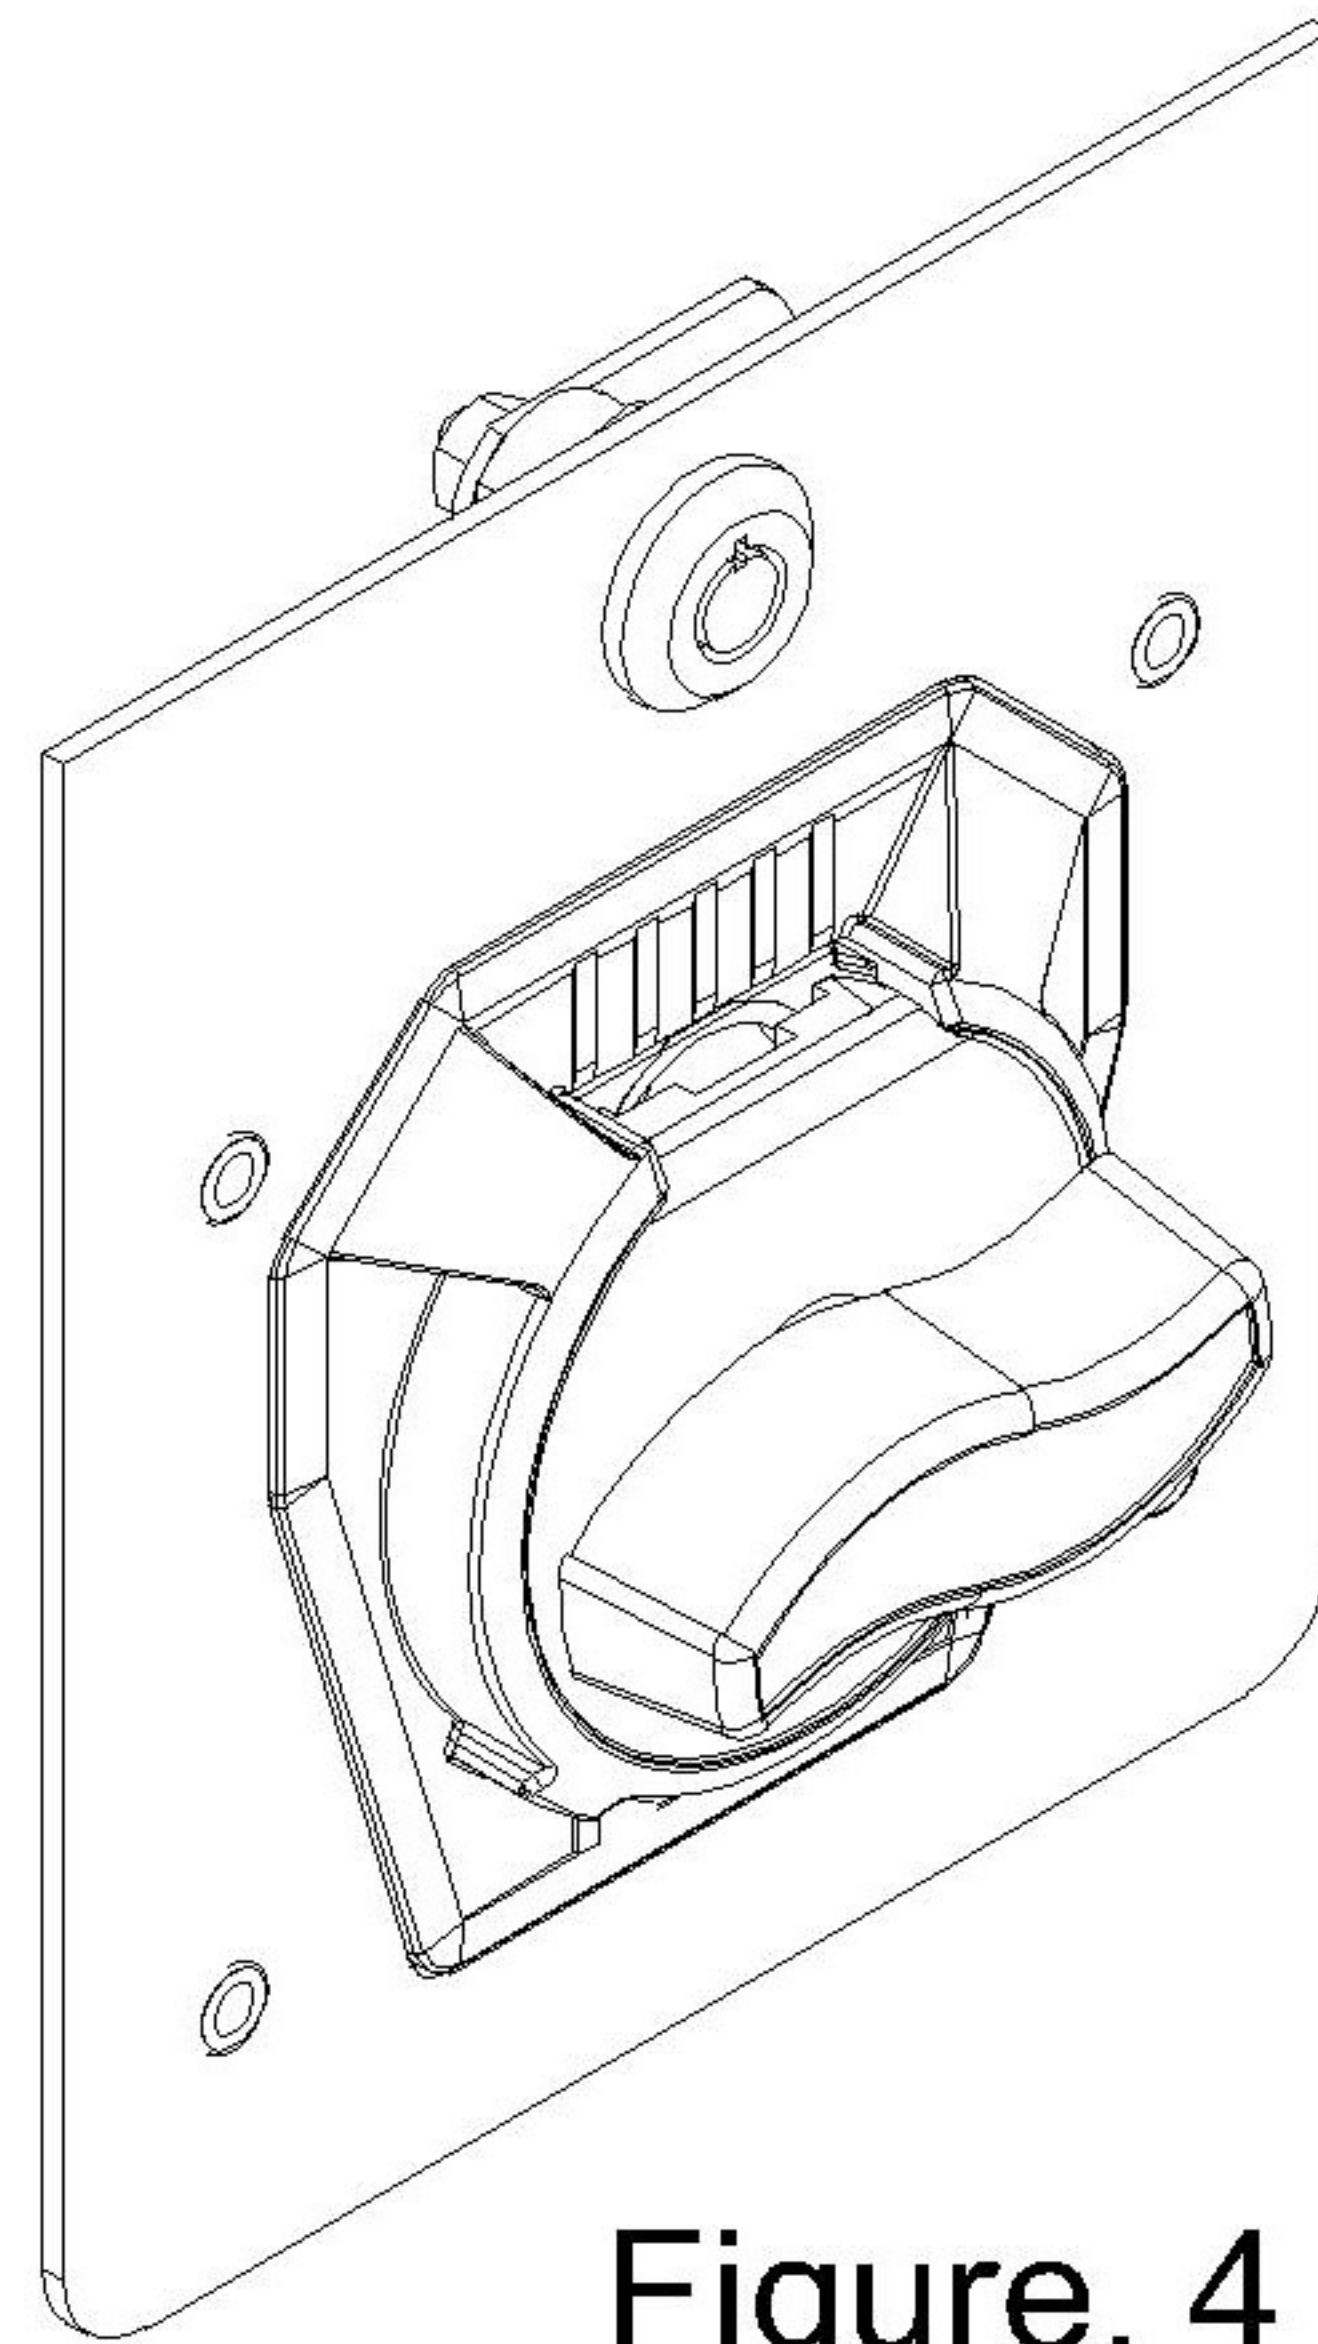


Figure. 4

Figure 5 coin mechanism Eexploded view illustration for adjustment and maintenance only.
Coin mechanism parts not sold separately.

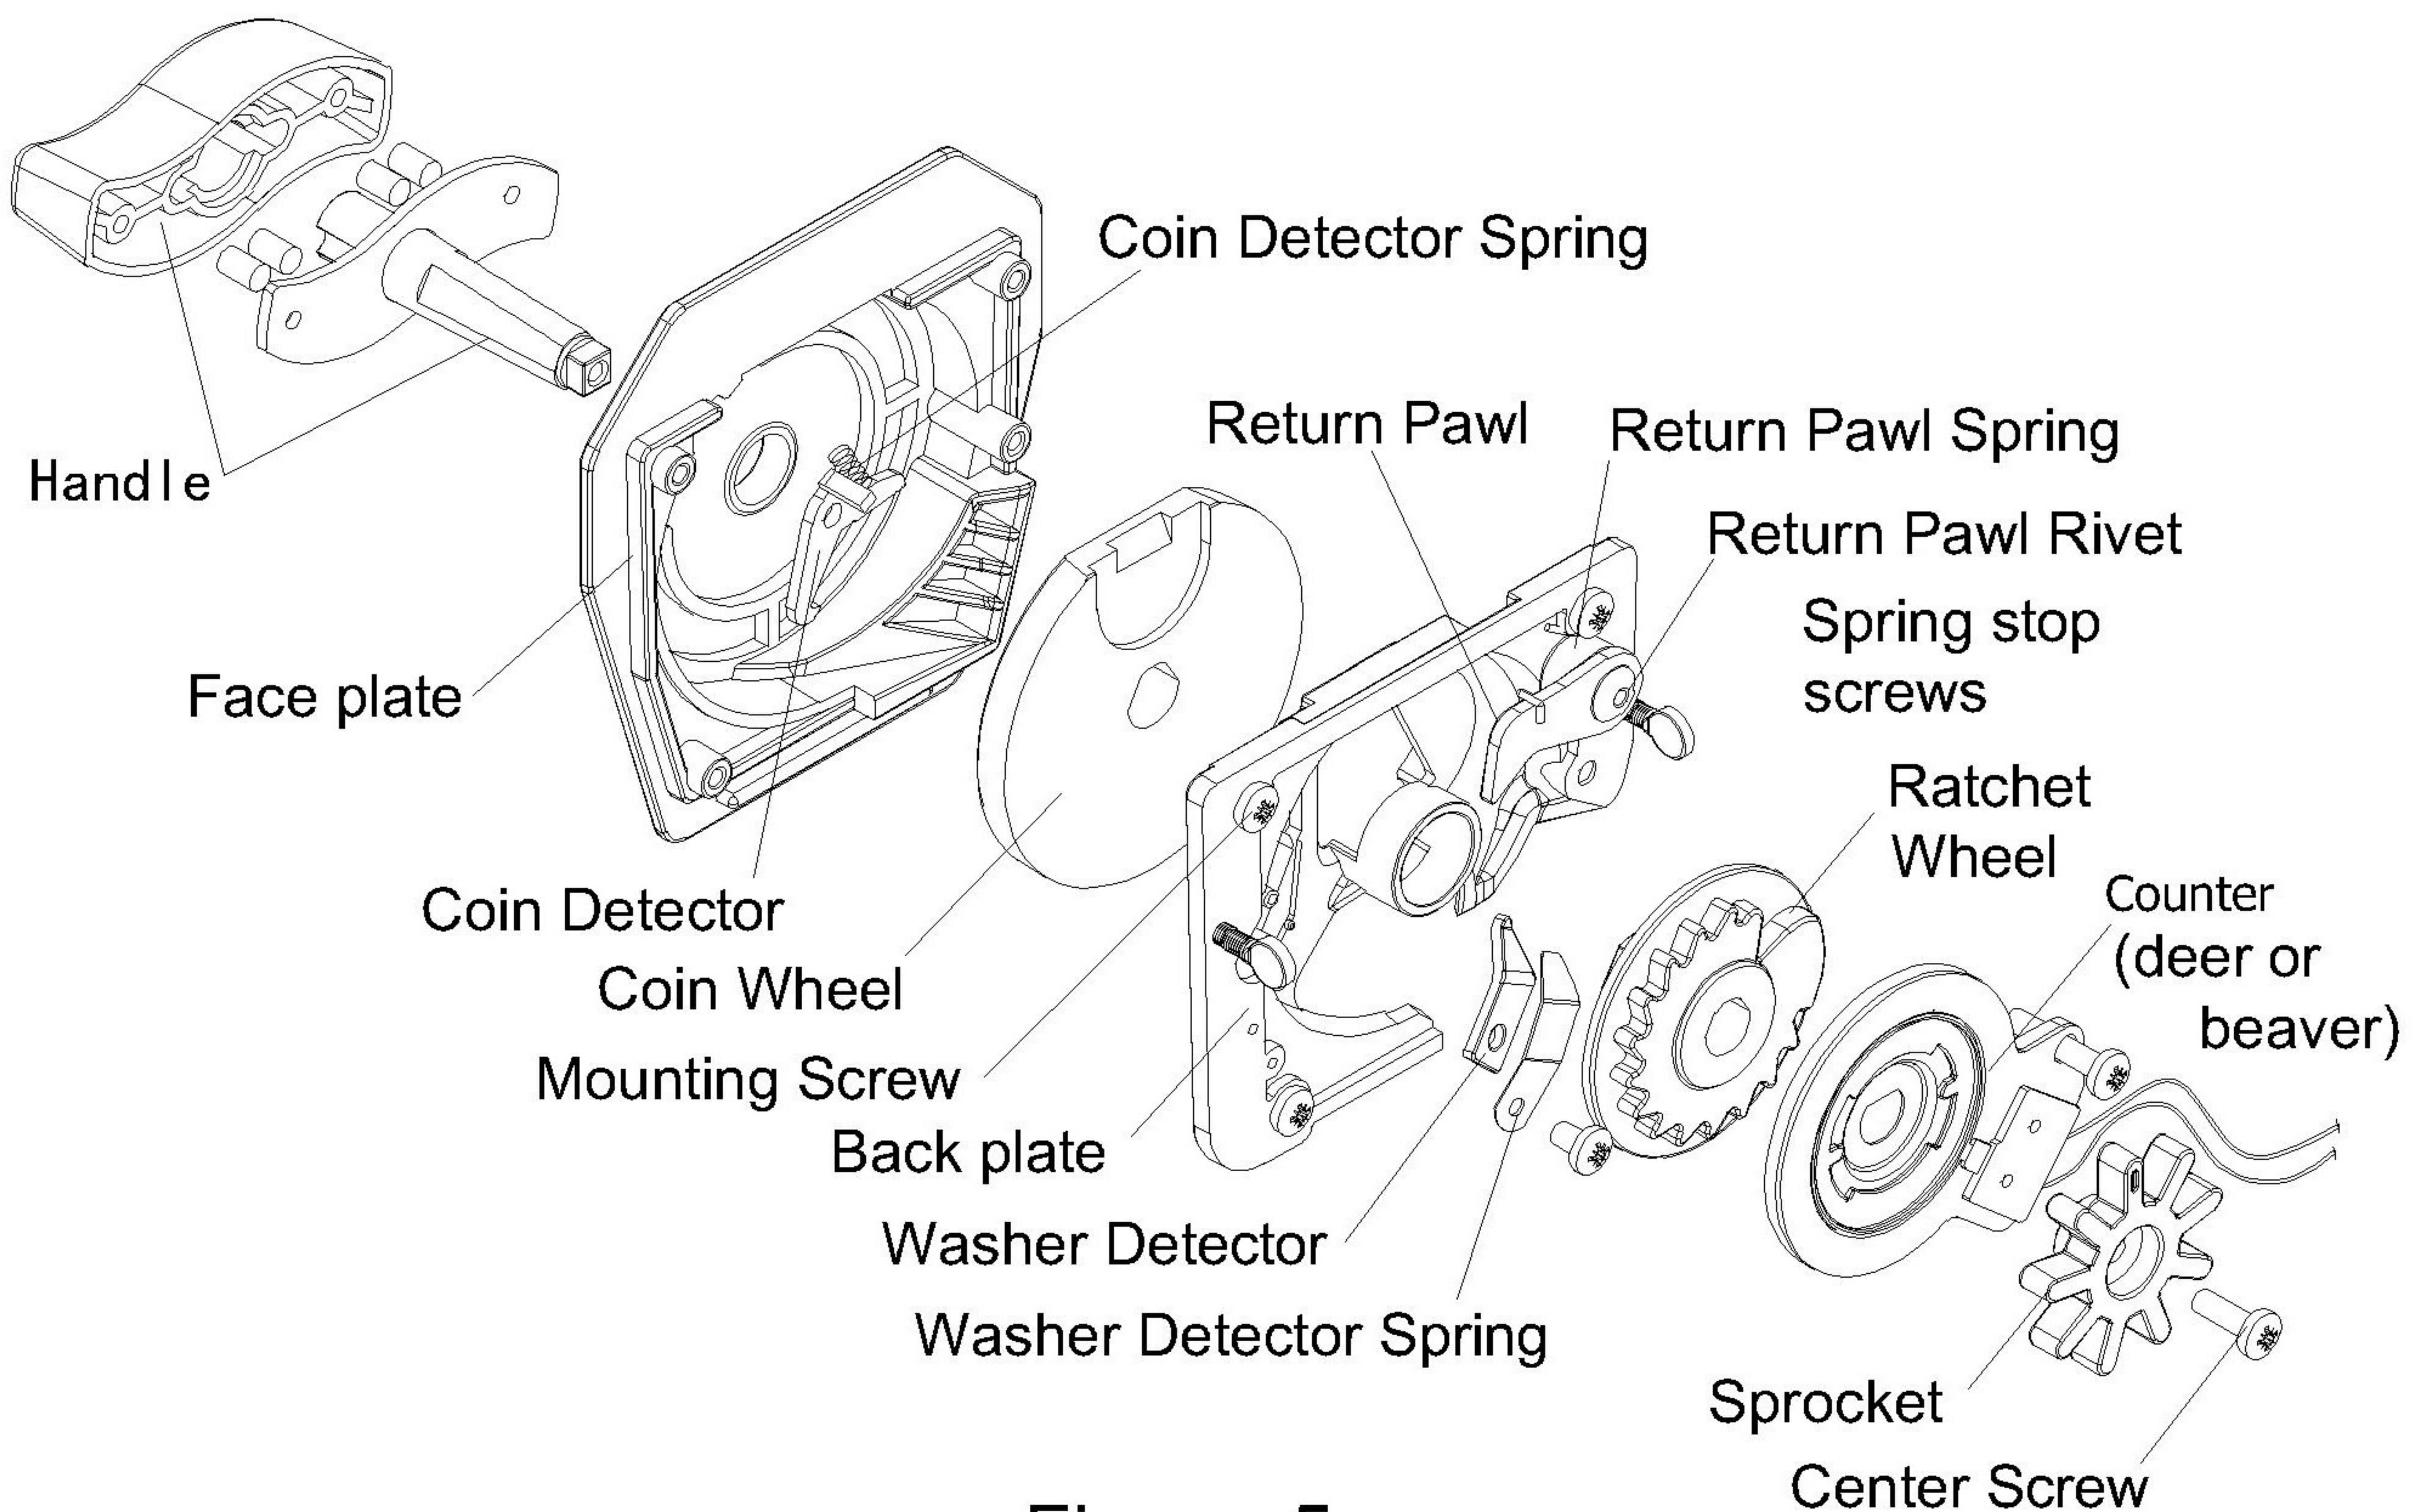


Figure. 5