

Auto Electric Shoe Polisher

Thank you for purchasing Auto Electric Shoe Polisher designed and manufactured for public use. While this machine will support light commercial use.

we recommend that it is not used for more than 20mins in each hour.

Please unpack the shoe cleaner and place on the floor in a location where children can not use it unsupervised. Remember, the machine works when by pressing the floor rug, a small child could switch it on by mistake.

Plug the machine into the mains. The plug is fitted with a 5amp fuse for you and the machine s protection. If the fuse ever needs replacing, please used a 5amp Fuse.

If you wish to use shoe polish cup in the middle of the machine, we recommend clear polish suitable for dark and light coloured shoes. Fill the shoe polish cup about half full. Push the shoe on the bottom of the cup to release the polish in small amounts on to the shoe.

Press the floor rug to switch on the brushes. Rub the shoes up and down and side to side to polish the shoe. The brushes will switch off automatically after about 15 seconds.

MODEL:XLD-XB1

SIZE:60×38×93cm

WEIGHT:25Kg

POWER:60W+45W

NOISE≤60DB

