

EV3833 Cigarette Vending Machine Instruction Manual



I. Door opening

Unlock, hold two side handles and then machine case to be pulled out, leaving internal structure and base there.

II. Off machine case

Lead rail under the bottom of machine case, there is a plastic valve on top of each rail. press the valve sheet one on the left hand side and push the one on the right hand side, machine case will be off entirely for a easy machine maintenance.

Note: Before demounting the case, pull out the plug of mainboard and coin identifying machine, in case of machine internal structure appears.

III. Mounting case

Support the case until the inside lead rails fit into the other two on case bottom, plug in, and then push to make case fit with internal structure.

IV. Goods loading

Put cigarette horizontally on the vending column, release it and then it will enter correctly. Load fully for front and back columns and make sure each cigarette is evenly loaded inside.



V. Currency identifying


- This machine identifies only 50 Cyprus Cents. It can identify five kinds of denomination at maximum (according to different country and different requirements)
- All commodity prices inside this machine set as 5x50C. Machine will automatically refuse any incoming sum when total payment reaches 5x50C
- Soft money not acceptable and changes not refundable

VI. Commodity selecting

- When plug in, long time lit green light in vending lane indicates commodity available and vending status OK.
- When sum comes to 5x50C, green light flashes and then customer begin to select commodity.
- Empty machine or machine breakdown, vending lane light turn red to alert.
- Put in money ,press relative button of vending lane, get commodity at the mouth of vending lane.
- The light on the mouth lashes 5 seconds after commodity comes out
- When machine is out of products or malfunctioned, the coin-mech would stop working.

VII. Managing function

1. system float chart

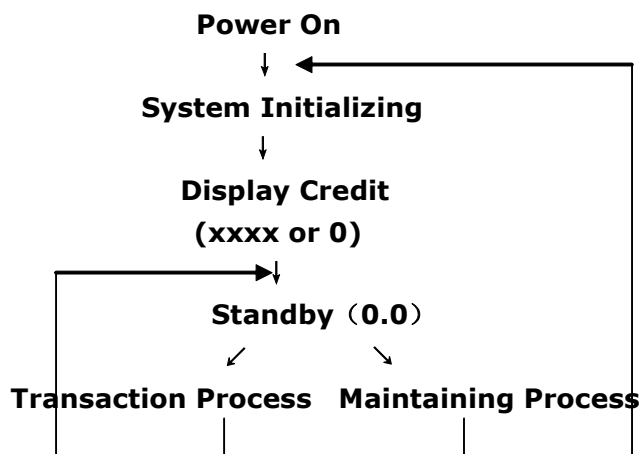

2. relative terms

below are some explain for the relative terms in the instruction:

01. vending column button: selecting button relative commodities in relative column
02. function button: white confirmation button(below) and white cancel button (up)
03. Price button: total 4 setting buttons, from left to side column 1 ,2, 3, 4. set unit price

from comma, percentile, tenth digit and one place respectively.

04. Transaction balance before unplugged: each time when plug the machine, it will show the last transaction record, if normal it will shows "0".

3. managing function control



01. Press confirmation button (display shows "F00.0") at standby state and then entered into managing control panel.
02. On the basic managing function operating window "F00.0", press confirmation button and exit managing function control and back to stand-by state.
03. Press cancel button select function control.(choose 1-6 functions F01.0-F06.0)
04. Press confirmation button and now enter into relative management controlling system and start each function operation. or, if press cancel button then back to the basic window of management control "F00.0" re-select other function operating. Always press canceling button when a single function operating finishes.
05. Press functional button and exit management control process, repeat step 2,3,4 go on with relative function operating.

- Note:
01. Each time when finish management control operating, unplug the machine to restart the whole system.
 02. f any breakdown happens to vending column, adjust machine manually and operate managing function 2 (F02.0) to do a testing and adjustment.
 03. Always re-adjust data of vending column (F02), setting up column price, clear relative statistic data.

04. This machine have been added to some transaction statistic function for better running, mainly including selling amount of each column, total coin income ect. In order to keep the statistic always correct, try a manual backup for the statistic, clear all data to zero and restart statistic.

4. introduction of managing function:

00. F00.0: Windows of management controlling.

Now press cancel button to choose relative function control respectively, press confirmation button to enter.

If press confirmation button then exit and go back to stand-by state.

01. F01.0: checking and setting price of each column

A: Under state of "F01.0", press cancel button and back to basic window of management control:"F00.0"

B: checking price of each column

Under "F01.0", press relative column button and window shows present price of each column. Press cancel button back to "F01.0", then press relative button again and go on with price checking.

C: price setting

Under F01.0, press relative column button, window shows present price of each column. Now press each price setting button (Column #1 button, #2. #3,#4) to reset price. Press #1 #2 #3 #4 for circling setting of comma, percentile, tenth digit and one place from 0-9. When price set, press confirmation button. Buzzer beeps (for reconfirmation reminding), press confirmation button one more time and newly set price done.

02. F02.0: Column Testing

Under F02.0, press relative column button(X), window show relative column #F02.X and a box will be pushed out. Then continue this step for other columns' testing, or press cancel button to back to management control window "F00.0". Those pushed out commodities not yet included into the statistic of transaction data. When any machine breakdown happens conduct this function and restart each motor and in this way the motor can be found out damaged or not.

03. F03.0 : check accumulative total of sold commodities

Press relative column button, window shows this column's accumulative total of sold items (package). The max be 65535, when exceed this sum data will be overflow.

Thus an in time manual backup is required. Clear all data to zero and restart statistic.

04. F04.0: check statistic data

Press column#1 button, window shows accumulative total sum of coins.

Press cancel button: back to basic management control window "F00.0"

05. F05.0: clear relative statistic date) (be cautious)

Under F05.0", press cancel button and cancel "clear data" operation. Directly back to basic window of management control: F00.00".

Under "F05.0, press button of Column#1, window shows "clr", now pressed confirmation button then all statistic data will be cleared.(accumulative total packages of each column and q'ty of coins received), meantime shows "clr", and this means operating succeeds and will then exit and back to management control window"F00.0". If operating fails, the buzzer will beeper for some time and later back to window" F00.0".

***** OVER *****