

# Spring Config Instructions

(TR320, TR325 & TR330)



1. Install all the above 4 springs for 45mm bouncy ball vending;
2. Install spring **B, C & D** only for 50-55mm toy capsule vending;
3. Install spring **A, C & D** only for 45mm toy capsule vending.