

Instructions for Assembling the Coin-Mech of TR320, TR325 & TR330

Steps 1 – Take off the metal gear wheel, metal tray and the handle.



Steps 2 – Release the screws on the back panel, and take off the spring.



Steps 3 – Take off the back panel.




Steps 4 – Take off the spring part on the right, then take off the coin carrier (coin-disc)



Steps 5 – Put on a new coin-disk, and then assemble the spring part on the right.




Steps 6 – Check the back panel carefully to see if it's FLAT enough, if not, you should make it FLAT enough. It's extremely IMPORTANT.

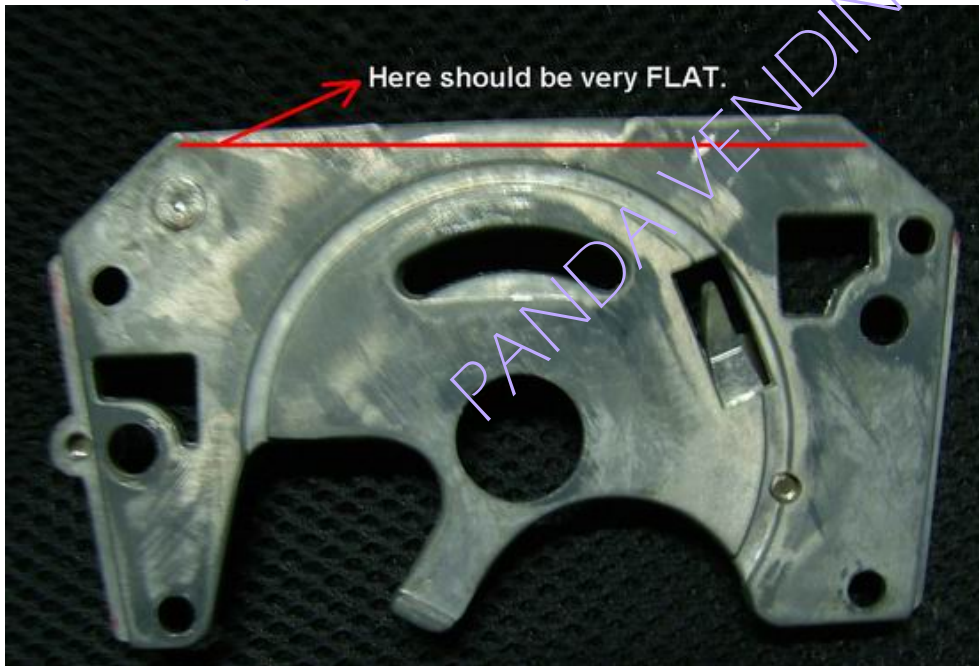

Steps 7 – Put on the FLAT back panel, and fasten the screws and spring on the panel.



Steps 8 – Stretch and connect the spring.

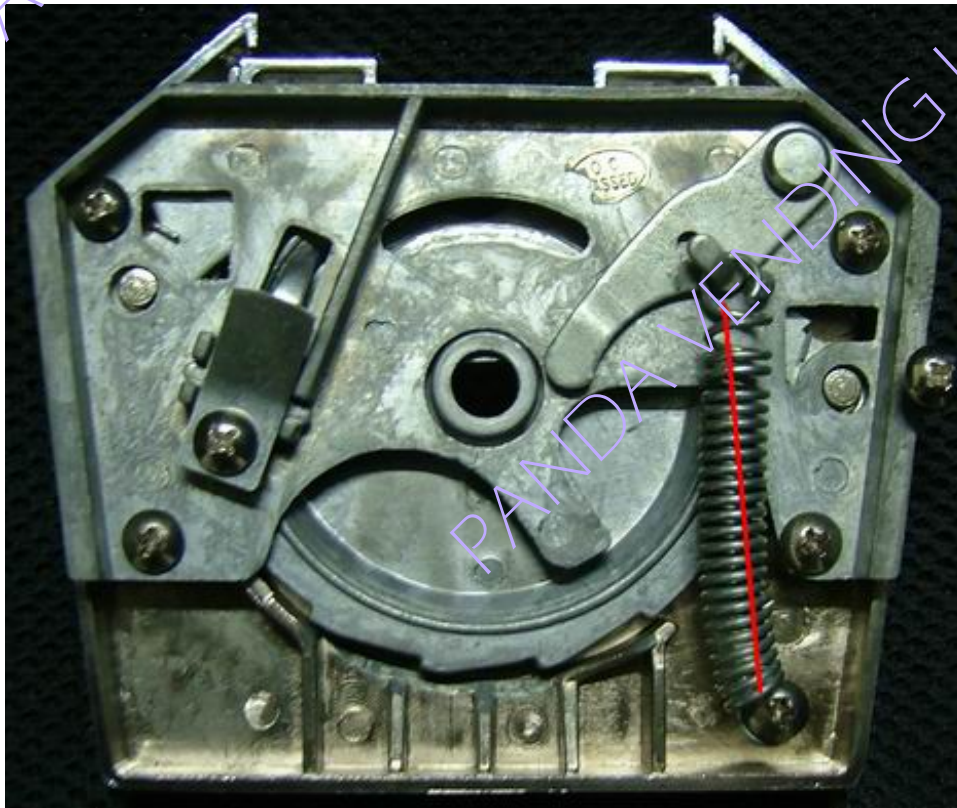

Steps 9 – Put on the handle and the metal tray.



Steps 10 – Put on the metal gear wheel, and fasten the bolts on the top.



Done!